

## Index

GENERAL INFORMATION .....	3
Manual use .....	4
Information property .....	4
Agreements and definitions .....	5
Recommendations for repair operations .....	6
SAFETY INSTRUCTIONS .....	9
General safety recommendations .....	10
Safety symbols .....	11
General precautions .....	12
INTRODUCTION .....	15
TIGHTENING TORQUES .....	17
Final drive and drive shafts.....	18
Upper shaft .....	19
Intermediate shaft.....	20
Intermediate shaft – lubricant pump.....	21
Lower shaft .....	22
Lower shaft .....	23
DISMOUNTING AND MOUNTING THE TRANSFER GEAR BOX FROM THE TRUCK.....	25
Dismounting and mounting the transfer gear box from the truck .....	26
DISASSEMBLING THE TRANSFER GEAR BOX AND THE GROUPS.....	27
Disassembling the transfer gear box and the groups .....	28
PREASSEMBLING THE GROUPS AND ASSEMBLING THE TRANSFER GEAR BOX .....	53
Preassembling the central flange .....	54
Preassembling the rear case .....	55
Preassembling the front case .....	57
Preassembling the rear support.....	58
Preassembling the upper front shaft .....	58
Preassembling the lower shaft .....	62
Preassembling the lower rear shaft .....	66
Preassembling the internal central shaft .....	69
Preassembling the upper rear shaft .....	71

<i>Preassembling the intermediate shaft</i> .....	74
<i>Preassembling the crown wheel with differential locking unit</i> .....	75
<i>Preassembling the satellite differential</i> .....	76
<i>Preassembling planet carrier for reduced (high and low) speed</i> .....	80
<i>Preassembling the shifting for differential lock engagement</i> .....	80
<i>Preassembling the oil pump</i> .....	81
<b>ASSEMBLING THE TRANSFER GEAR BOX</b> .....	85
<i>Assembling the transfer gear box</i> .....	86
<b>TESTING THE TRANSFER GEAR BOX</b> .....	121
<b>SPECIAL TOOLS</b> .....	123